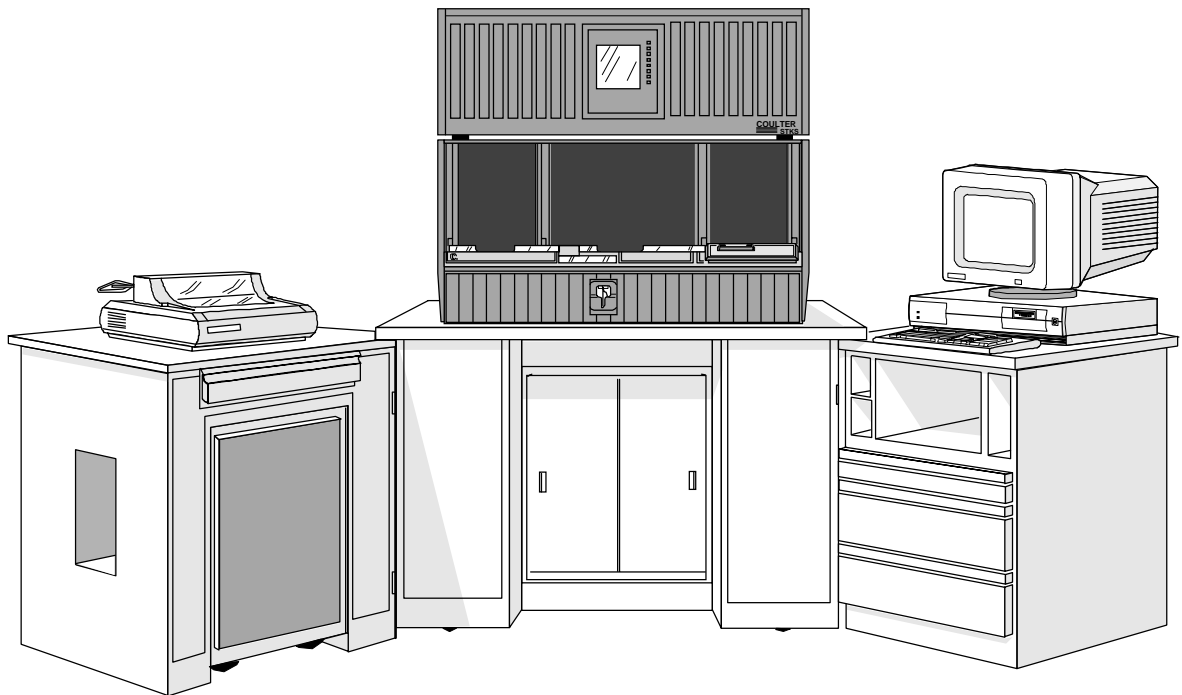

COULTER® STKS Analyzer
COULTER® STKS Analyzer with Reticulocyte Analysis
COULTER® STKS Analyzer with CD4 and CD8 Lymphocyte
Analysis

Service Manual



Coulter Corporation makes no representation that, upon furnishing this service manual, the holder of the manual will have the necessary technical capabilities and know-how to properly troubleshoot and repair any of the equipment specified in the manual. Coulter Corporation assumes no liability whatsoever, including consequential and incidental damages, resulting from improper operation of Coulter instruments after maintenance of Coulter instruments has been performed by persons not employed by Coulter Corporation. Furthermore, Coulter Corporation assumes no liability whatsoever for any personal injury or property damage resulting from maintenance and/or repair of Coulter instruments performed by persons not employed by Coulter Corporation.

HAZARDS AND OPERATIONAL PRECAUTIONS AND LIMITATIONS

WARNINGS, CAUTIONS, and IMPORTANTS alert you as follows:

WARNING	- Might cause injury.
CAUTION	- Might cause damage to the instrument.
IMPORTANT	- Might cause misleading results.

Coulter Corporation urges its customers to comply with all national health and safety standards, such as the use of barrier protection. This may include, but is not limited to, protective eyewear, gloves, and suitable laboratory attire when operating or maintaining this or any other automated laboratory analyzer.

AccuComp, ACCUVETTE, ACCU-ZYME, AQUA-AD, AUTO-CAL, AUTO-CLONE, CARDS, CASH, "CC" logo, CHANNELYZER, CHEMOTERGE, COMPLETE CELL ANALYSIS, COSINE, COULTER, COULTER CHEMISTRY, COULTER CLENZ, COULTER CLONE, THE COULTER COUNTDOWN, COULTER COUNTER, COULTER CURRENTS, COULTERAMA, Cyto-Spheres, CYTO-COMP, CYTO-STAT, CYTO-TROL, C-ZYME, DACAL, DACOS, "DACOS" logo, DART, DIFF3, DIFF3 50, DIFF4, DILU-PACK, E.A.SY. 1, EASY 88, EASY 2, EPICS, FACULTY, FASTECS, Flow-Check, Flow-Count, Flow-Set, 5C, 4C, HEMO-CAL, HEMOTERGE, HEMO-W, IsoFlow, ISOLYSE, ISOPET, ISOTERGE, ISOTON, LANGLEY FORD, LANGLEY FORD INSTRUMENTS, LEASE-PAK, "LFI" logo, LYSE S, MDADS, MINI-KEM, NANO-SIZER, OMNISORP, OptiChem, Retic-Cal, reticONE, Retic-STAT, S-CAL, SafePrep, SOMACOUNT, SOMAFIX, SOMATON, STAIN RIGHT, SYSTEM II, tetraCHROME, tetraONE, triCHROME, THROMBOCOUNTER, THROMBO-FUGE, U.V.-ZYME, ZAP-OGLOBIN, ZAPONIN and ZETAFUGE are trademarks of Coulter Corporation.

4/17/96

Bernoulli is a registered trademark of Iomega Corporation.

CheckIt is a registered trademark of Touchstone Software Corporation.

Code 39 is a registered trademark of Interface Mechanisms, Inc.

DESQview is a trademark of Quarterdeck Office Systems.

FLUKE and SCOPMETER are registered trademarks of John Fluke Mfg. Co.

HEMOGARD is a trademark of Becton - Dickinson and Company.

IBM is a registered trademark of International Business Machines Corporation.

INTERMEC is a registered trademark of Intermec Corporation.

Intel is a registered trademark of Intel Corporation.

OPTune is a trademark of Gazelle Systems.

Pinwriter and PowerMate are registered trademarks of NEC Information Systems, Inc.

TATUNG is a registered trademark of Tatung, Co.

Teflon is a registered trademark of E.I. duPont de Nemours & Co.

ULTRASYN is a registered trademark of Princeton Graphic Systems.

VirusScan is a trademark of McAfee, Inc.

Wyse is a registered trademark of Wyse Technology, Inc.

XB-2420 is a trademark of Star Micronics Co., Ltd.

Zoom is a registered trademark of Zoom Telephonics, Inc.

"This Service Manual contains confidential information of Coulter Corporation and its receipt or possession does not convey any rights to reproduce, disclose its contents, or to manufacture, use, or sell anything it may describe. Reproduction, disclosure, or use without specific written authorization of Coulter Corporation is strictly forbidden."

REVISION STATUS

Issue	Date	Amended Pages	Software Level
A	9/89		
B	11/89	3-8, 4-18, 6-38, 6-40, 6-79, 6-116, 6-121, Appendix A	1B/1B
C	12/89	Section 8	
D	5/90	Complete Revision	
E	8/90	xv and xvi, xx, Appendix B	
F	11/91	3-21, 3-22, 4-8, 4-10, 4-31, 5-21 through 5-31, Chapter 6, Chapter 7, B-17, B-30	
G	3/94	4-27 through 4-33, 5-30 through 5-33, Chapter 6 - all, 8-8 through 8-35, Appendix B - all, Appendix C	2A
H	11/95	Complete Revision	2B
J	4/96	<p>Updated text for software level 3A (no hardware changes). Updated SVP form in Chapter 5, Maintenance Procedures and updated parts list.</p> <p>New headings include: 3.10, Software 1G.1 to Revision 3X Upgrade; 3.11, Enabling the Retic Option (Software Version 2X and Higher); 3.12, Enabling the CD4 and CD8 Options (Software Version 3X and Higher); 3.13, CD4 and CD8 Sample Preparation Mixer; and 3.14, Software 2A to Revision 3X Upgrade.</p> <p>Due to additions/deletions of material, pagination changed in some areas. Actual text changes, noted by change bars occurred on pages: CONTENTS VOLUME I: v, xi, xii, xviii, xix, xx, xxiii, xxv, xxvi, xxvii. 1.1-1, 1.1-2, 2.1-1, 2.1-2, 2.2-1, 2.7-1, 2.8-11, 2.8-12, 2.9-2, 2.10-6, 2.12-1, 2.13-4, 2.16-1, 2.19-1 through 2.19-3, 2.20-2, 2.24-2, 2.25-2, 2.26-2, 2.30-2, 2.33-1, 2.37-3, 2.37-4, 2.38-1, 2.43-2, 3.3-3, 3.6-1 through 3.6-3, 3.8-2, 3.9-8 through 3.9-10, 4.1-3, 4.1-4, 4.2-3, 4.10-1 through 4.10-5, 4.19-3, 4.19-4, 4.22-1 through 4.22-3, 4.34-6, 4.38-2, 4.41-6, 4.48-2, 4.50-1, 4.50-2, 4.50-5 through 4.50-8, 4.50-10, 4.50-14 through 4.50-20, 4.50-22, 4.50-23, 4.53-1, 4.53-2, 4.56-1, 4.56-4 through 4.56-14, 4.56-16, 4.60-35, 4.60-36. CONTENTS VOLUME II: iii, iv, vi, viii, 6.1-1, 7.1-2, 7.8-1, 7.9-1, 7.10-1, 7.12-1, 7.13-1, 9-ii, A.1-2, A.1-8, A.2-3, A.3-3, A.3-5, ABBREVIATIONS-1 through ABBREVIATIONS-4, INDEX-1, INDEX-3, INDEX-5, INDEX-7 through INDEX-21.</p>	3A

Changes that are part of the most recent revision are indicated in text by a black bar in the margin of the amended line(s) of text.

This document applies to the latest software listed and higher versions. When a subsequent software version changes the information in this document, a new issue will be released.

Volume I

- 1 INTRODUCTION, 1.1-1
 - 1.1 MANUAL DESCRIPTION, 1.1-1
 - Scope of Content, 1.1-1
 - Intended Audience, 1.1-1
 - Organization, 1.1-2
 - Numbering Format, 1.1-3
 - Special Headings, 1.1-3
 - WARNING, 1.1-3
 - CAUTION, 1.1-3
 - IMPORTANT, 1.1-3
 - ATTENTION, 1.1-3
 - Note, 1.1-3
 - Conventions, 1.1-3
 - 1.2 SAFETY PRECAUTIONS, 1.2-1
 - Electronic, 1.2-1
 - Biological, 1.2-1
 - Laser, 1.2-2
 - Laser Beam Hazards, 1.2-2
 - Radiation Hazards, 1.2-3
 - Troubleshooting, 1.2-3
-
- 2 INSTRUMENT DESCRIPTION, 2.1-1
 - PART A: STKS SYSTEM, 2.1-1
 - 2.1 INTRODUCTION TO THE COULTER STKS, 2.1-1
 - Function, 2.1-1
 - Description, 2.1-1
 - Components, 2.1-1
 - Physical Specifications, 2.1-1
 - Leakage Current Checks, 2.1-2
 - Diagnostic Products, 2.1-2
 - Interfering Substances, 2.1-2
 - Operation, 2.1-2
 - Modes, 2.1-2
 - Procedures, 2.1-2
 - PART B: POWER SUPPLY, 2.2-1
 - 2.2 POWER SUPPLY OVERVIEW, 2.2-1
 - Major Subassemblies, 2.2-1
 - Ac Input, 2.2-1
 - Ventilation, 2.2-1
 - Optional Transformer, 2.2-1
 - 2.3 ELECTRONIC POWER SUPPLY, 2.3-1
 - Description, 2.3-1
 - External Indicators - Front Panel Display, 2.3-1
 - External Test Points and Fuses - MAIN POWER PACK, 2.3-1
 - External Test Points and Fuses - CONTROL MODULE, 2.3-3

- [Control Voltage Section, 2.3-3](#)
 - [Aperture Current Voltage Section, 2.3-3](#)
 - [Power Supply Connections, 2.3-3](#)
 - 2.4 [POWER UP SEQUENCE, 2.4-1](#)
 - [Control Voltages Development, 2.4-1](#)
 - [14-V Unregulated Control Voltage, 2.4-1](#)
 - [5-V Control Voltage, 2.4-3](#)
 - [Power Up Sequence, Diluter POWER ON Pressed, 2.4-3](#)
 - [INSTRUMENT ON Signal, 2.4-3](#)
 - [Electronic Switch \(S2\), 2.4-4](#)
 - [Application of Ac to Electronic Power Supply Through K2, 2.4-4](#)
 - [+9 V FAIL Signal and MEMORY DISABLE CMOS Signal Generation, 2.4-5](#)
 - [+ 9 V FAIL Signal, 2.4-5](#)
 - [MEMORY DISABLE CMOS Signal, 2.4-5](#)
 - [COMPRESSOR ON, 2.4-6](#)
 - [COMPRESSOR ON Signal, 2.4-6](#)
 - [Compressor Switch \(S1\), 2.4-6](#)
 - [PNEUMATICS O.K., 2.4-8](#)
 - [PNEUMATIC FAULT Signal, 2.4-8](#)
 - [PNEUMATICS O.K. Signal, 2.4-8](#)
- 2.5 [VOLTAGE DEVELOPMENT, 2.5-1](#)
 - [General, 2.5-1](#)
 - [Aperture Current Supply, 2.5-1](#)
 - [MAIN POWER PACK Vac Development, 2.5-1](#)
 - [Ac Input, 2.5-1](#)
 - [12 Vac, 2.5-1](#)
 - [MAIN POWER PACK Vdc Development, 2.5-1](#)
 - [General, 2.5-1](#)
 - [9-Vdc Development, 2.5-3](#)
 - [Other Dc Voltage Development, 2.5-3](#)
 - [MAIN POWER PACK Voltage Regulation, 2.5-3](#)
 - [9-Vdc Regulation, 2.5-3](#)
 - [Other Vdc Regulation, 2.5-4](#)
 - [Dc Supply Voltage Distribution, 2.5-4](#)
 - [Analyzer Backplane Voltage Regulation and Distribution, 2.5-4](#)
- 2.6 [PNEUMATIC POWER SUPPLY, 2.6-1](#)
- PART C: DILUTER, 2.7-1**
- 2.7 [DILUTER OVERVIEW, 2.7-1](#)
 - [Primary Mode, 2.7-1](#)
 - [Secondary Mode, 2.7-1](#)
 - [Diluter Components, 2.7-1](#)
 - 2.8 [FLUIDIC SYSTEM, 2.8-1](#)
 - [Schematics, 2.8-1](#)
 - [Main Components, 2.8-1](#)
 - [Solenoids \(SL\), 2.8-15](#)
 - [Pinch Valves \(VL\), 2.8-15](#)
 - [Manifolds \(MF\) and Quick Disconnects \(QD\), 2.8-15](#)
 - 2.9 [DILUTER F-KEY FUNCTIONS, 2.9-1](#)
 - 2.10 [DILUTER CONTROL 3 CARD, 2.10-1](#)
 - [Location, 2.10-1](#)

- [Major Functions, 2.10-1](#)
- [Control Program, 2.10-2](#)
 - [Address Decoding, 2.10-2](#)
 - [Operating Program, 2.10-2](#)
 - [Communications, 2.10-2](#)
 - [Controls, 2.10-2](#)
- [Power Drivers, 2.10-4](#)
- [Read Sensor Status, 2.10-4](#)
- [Programmable Hgb Lamp Control, 2.10-5](#)
- [Power Up/Down Sensing Circuit, 2.10-5](#)
- [Connectors, 2.10-6](#)

- [2.11 DILUTER INTERCONNECT PANEL, 2.11-1](#)

- [2.12 DILUTER INTERLOCK SWITCHES AND SENSORS, 2.12-1](#)

- [2.13 BAR-CODE READER, 2.13-1](#)
 - [Bar-Code Scanner \(BCS\), 2.13-1](#)
 - [Labels Read, 2.13-1](#)
 - [Description, 2.13-1](#)
 - [Good Reading Requirements, 2.13-1](#)
 - [Bar-Code Decoder \(BCD\) Card, 2.13-2](#)
 - [Good Scan Alarm, 2.13-3](#)

- [2.14 BUBBLE/BLOOD DETECTOR, 2.14-1](#)
 - [Components, 2.14-1](#)
 - [Operation, 2.14-1](#)
 - [Aspiration Fault, 2.14-1](#)
 - [Fail Conditions, 2.14-1](#)
 - [Bubble/Blood Detector Disabled, 2.14-1](#)

- [2.15 TUBE DETECTOR, 2.15-1](#)
 - [Description, 2.15-1](#)

- [2.16 VCS TECHNOLOGY, 2.16-1](#)
 - [Measured Parameters, 2.16-1](#)
 - [Volume \(DC\), 2.16-1](#)
 - [Conductivity \(RF\), 2.16-1](#)
 - [Light Scatter \(LS\), 2.16-1](#)
 - [Derived Parameters, 2.16-2](#)
 - [Opacity \(OP\), 2.16-2](#)
 - [Rotated Light Scatter \(RLS\), 2.16-2](#)
 - [Triple Transducer Module, 2.16-2](#)

- [2.17 RF DETECTOR PREAMP CARD, 2.17-1](#)
 - [Location and Description, 2.17-1](#)
 - [Functions, 2.17-1](#)

- [2.18 RF POWER SUPPLY, 2.18-1](#)
 - [RF Transformer, 2.18-1](#)
 - [RF Power Supply 2 Card, 2.18-2](#)

- [2.19 LIGHT SCATTER PREAMP MODULES, 2.19-1](#)
 - [General, 2.19-1](#)
 - [Modules In Use, 2.19-1](#)
 - [Location, 2.19-1](#)
 - [Servicing, 2.19-1](#)
 - [Light Scatter Preamp Module, 2.19-1](#)

- [LS Preamp 4 Module, 2.19-2](#)
 - [Function, 2.19-2](#)
 - [Mode Select, 2.19-2](#)
 - [LS Offset, 2.19-3](#)
 - [Power Supplies, 2.19-3](#)

- [2.20 LASER POWER SUPPLY 2, 2.20-1](#)

- [2.21 SENSOR CARD, 2.21-1](#)

- [PART D: ANALYZER, 2.22-1](#)

- [2.22 ANALYZER OVERVIEW, 2.22-1](#)
 - [Function, 2.22-1](#)
 - [Circuit Cards, 2.22-1](#)
 - [Signal Flow, 2.22-1](#)
 - [Interconnecting Cables, 2.22-1](#)

- [2.23 DATA COLLECTION, 2.23-1](#)
 - [Data Paths, 2.23-1](#)
 - [Red Blood Cell \(RBC\) Data Path, 2.23-1](#)
 - [White Blood Cell \(WBC\) Data Path, 2.23-2](#)
 - [Platelet \(Plt\) Data Path, 2.23-3](#)
 - [Hemoglobin \(Hgb\) Path, 2.23-3](#)
 - [Aperture Zap \(Cleaning\) Circuit, 2.23-4](#)
 - [Differential Data Path, 2.23-4](#)
 - [Data Collection Timing, 2.23-4](#)
 - [WBC Histogram, 2.23-4](#)
 - [RBC Histogram, 2.23-5](#)
 - [Plt Histogram, 2.23-5](#)

- [2.24 INPUT/OUTPUT CALIBRATION \(I/O CAL\) 2 CARD, 2.24-1](#)
 - [Function, 2.24-1](#)
 - [Components, 2.24-1](#)
 - [Switch Settings, 2.24-2](#)

- [2.25 MULTIPLE PROCESSING UNIT \(MPU\)/87 CARD, 2.25-1](#)
 - [Description, 2.25-1](#)
 - [Components, 2.25-1](#)
 - [Switch Settings, 2.25-1](#)

- [2.26 RED/WHITE COUNTER \(RED/WHT CTR\) 2 CARD, 2.26-1](#)
 - [Function, 2.26-1](#)
 - [Components, 2.26-1](#)

- [2.27 APERTURE CURRENT/SIGNAL GENERATOR \(APERT CUR/SIG GEN\) CARD, 2.27-1](#)
 - [Function, 2.27-1](#)
 - [Components, 2.27-1](#)

- [2.28 POWER SUPPLY MONITOR \(PS MON\) 2 CARD, 2.28-1](#)
 - [Function, 2.28-1](#)
 - [Components, 2.28-1](#)
 - [Jumpers, 2.28-2](#)

- [2.29 RED/WHITE PREAMPLIFIER \(RED/WHT PRE-AMP\) CARDS, 2.29-1](#)

- [2.30 PLATELET PROCESSOR \(PLAT PROC\) CARD, 2.30-1](#)
 - [Function, 2.30-1](#)
 - [Components, 2.30-1](#)

- [2.31](#) [PLATELET ANALOG TO DIGITAL CONVERTER \(PLAT ADC\) CARD, 2.31-1](#)
- [2.32](#) [DATA MEMORY \(MEM\) CARD, 2.32-1](#)
 - [Function, 2.32-1](#)
 - [Components, 2.32-1](#)
- [2.33](#) [RED/WHITE \(RED/WHT\) EDITOR CARDS, 2.33-1](#)
 - [Function, 2.33-1](#)
 - [Components, 2.33-1](#)
- [2.34](#) [RED/WHITE ANALOG TO DIGITAL CONVERTER \(RED/WHT ADC\) CARD, 2.34-1](#)
- [2.35](#) [DELAY/APERTURE CLEANING \(DLY/APERT CLNG\) CARD, 2.35-1](#)
- [2.36](#) [CRT MODULES, 2.36-1](#)
 - [Function, 2.36-1](#)
 - [Analyzer Scope Modes, 2.36-1](#)
 - [Switch Settings, 2.36-13](#)
- [2.37](#) [ANALOG 2 AND ANALOG 4 CARDS, 2.37-1](#)
 - [General, 2.37-1](#)
 - [ANALOG 2 Card, 2.37-1](#)
 - [Function, 2.37-1](#)
 - [Signals, 2.37-1](#)
 - [ANALOG 4 Card, 2.37-4](#)
 - [Function, 2.37-4](#)
 - [Signals, 2.37-4](#)
- [2.38](#) [DIFFERENTIAL PROCESSOR \(DIFF PROC\) CARDS, 2.38-1](#)
 - [General, 2.38-1](#)
 - [Function, 2.38-1](#)
 - [Signals, 2.38-1](#)
 - [Serial Port Interfaces, 2.38-3](#)
 - [Terminal Port, 2.38-3](#)
- [2.39](#) [ANALYZER SERVICE OPTIONS, 2.39-1](#)
- [PART E: DMS, 2.40-1](#)
- [2.40](#) [DATA MANAGEMENT SYSTEM \(DMS\) OVERVIEW, 2.40-1](#)
 - [Function, 2.40-1](#)
 - [Description, 2.40-1](#)
- [2.41](#) [DISK DRIVES, 2.41-1](#)
 - [Function, 2.41-1](#)
 - [Types of Hard Disk Drives Used, 2.41-1](#)
- [2.42](#) [UNIVERSAL DMS HARDWARE, 2.42-1](#)
 - [Digiboard 4 Channel I/O Card, 2.42-1](#)
 - [Description, 2.42-1](#)
 - [Jumpers, 2.42-1](#)
 - [Zoom® Modem, 2.42-3](#)
 - [Description, 2.42-3](#)
 - [Jumpers, 2.42-3](#)
 - [Communication Adapter Card, 2.42-3](#)

- 2.43 [INTEL® 301Z COMPUTER, 2.43-1](#)
 - [System Card, 2.43-1](#)
 - [Description, 2.43-1](#)
 - [Jumpers, 2.43-1](#)
 - [Power Supply, 2.43-3](#)
 - [Description, 2.43-3](#)
 - [Video Graphics Adapter \(VGA\) Card, 2.43-5](#)
 - [Description, 2.43-5](#)
 - [Jumpers and Switches, 2.43-5](#)
 - [RAM Card \(2 MB\), 2.43-5](#)
 - [Disk Drive Controller Card, 2.43-5](#)
 - 2.44 [INTEL 300SX16 AND INTEL 300SX20 COMPUTERS, 2.44-1](#)
 - 2.45 [MONITORS, 2.45-1](#)
 - [Princeton ULTRASYNC® Monitor, 2.45-1](#)
 - [Wyse® Monitor, 2.45-2](#)
 - [TATUNG® Monitors, 2.45-2](#)
 - 2.46 [DMS SOFTWARE, 2.46-1](#)
 - [Operating System, 2.46-1](#)
 - [Multi-Tasking Operating Environment, 2.46-1](#)
 - [Hard Disk Optimizer, 2.46-1](#)
 - [DMS Program, 2.46-2](#)
 - [Service Diagnostic Programs, 2.46-2](#)
- 3 [INSTALLATION PROCEDURES, 3.1-1](#)
- [PART A: INSTRUMENT INSTALLATION, 3.1-1](#)
- 3.1 [PREINSTALLATION CHECK, 3.1-1](#)
 - [Customer Training, 3.1-1](#)
 - [Carton Arrival, 3.1-1](#)
 - [Space and Accessibility, 3.1-1](#)
 - [Electrical Input, 3.1-1](#)
 - [Ambient Temperature and Humidity, 3.1-2](#)
 - [Ventilation, 3.1-2](#)
 - [Drainage, 3.1-2](#)
 - [Supplies, 3.1-2](#)
 - 3.2 [INITIAL SETUP, 3.2-1](#)
 - [POWER SUPPLY Check, 3.2-3](#)
 - [Diluter Check, 3.2-3](#)
 - [Analyzer Check, 3.2-4](#)
 - 3.3 [CONNECTING ASSEMBLIES, 3.3-1](#)
 - [Electronic Cable Connections, 3.3-1](#)
 - [Tubing Connections, 3.3-4](#)
 - 3.4 [TESTING ASSEMBLIES, 3.4-1](#)
 - [POWER SUPPLY, 3.4-1](#)
 - [DMS, 3.4-1](#)
 - [Analyzer, 3.4-2](#)
 - [Diluter, 3.4-3](#)
 - 3.5 [SYSTEM TESTING, 3.5-1](#)
 - [Start Up Instrument, 3.5-1](#)

- [Check Carryover - CBC, Primary Mode, 3.5-1](#)
- [Check Carryover - CBC, Secondary Mode, 3.5-1](#)
- 3.6 [CALIBRATION, 3.6-1](#)
 - [Initial Calibration Checks and Adjustments, 3.6-1](#)
 - [Verify VCS Flow Rate, 3.6-1](#)
 - [Verify CBC-Latex Calibration, Aperture Balancing and Flow-Rate Matching, 3.6-1](#)
 - [Verify Diff Latex Calibration, 3.6-1](#)
 - [Verify Retic Latex Calibration, 3.6-1](#)
 - [Initial Adjustment to 5C® Cell Control, 3.6-2](#)
 - [Verify Reproducibility in the Primary Mode, 3.6-2](#)
 - [Verify Reproducibility in the Secondary Mode, 3.6-2](#)
 - [Verify Primary and Secondary Mode Matching, 3.6-2](#)
 - [Check Retic Carryover, 3.6-2](#)
 - [Verify Retic Reproducibility, 3.6-2](#)
 - [Final Calibration, 3.6-3](#)
 - [Controls, 3.6-3](#)
 - [Recording Reference Voltages and K-Cal Values, 3.6-3](#)
 - [Ramp and Precision Tests, 3.6-4](#)
 - [Diff Analog Pulses Test, 3.6-4](#)
 - [Total System Checkout, 3.6-4](#)
 - [Certification Procedures, 3.6-4](#)
- 3.7 [ACCOUNT/INSTRUMENT INFORMATION, 3.7-1](#)
- 3.8 [INSTALLATION LOG SHEETS, 3.8-1](#)

[PART B: UPGRADES AND OPTIONS INSTALLATION, 3.9-1](#)

- 3.9 [SOFTWARE 1G.1 to 2B UPGRADE, 3.9-1](#)
 - [System Qualifications for Upgrade, 3.9-1](#)
 - [Software, 3.9-1](#)
 - [Hardware, 3.9-1](#)
 - [Host Interface, 3.9-1](#)
 - [Time Required to Perform Upgrade, 3.9-1](#)
 - [Tools/Supplies Needed, 3.9-1](#)
 - [STKS Baseline, 3.9-1](#)
 - [Hardware Upgrade, 3.9-2](#)
 - [ANALOG Card, 3.9-2](#)
 - [DIFF PROC Card, 3.9-2](#)
 - [MPU/87 Card, 3.9-2](#)
 - [I/O CAL Card, 3.9-3](#)
 - [Diluter Control 3 Card, 3.9-3](#)
 - [Laser REF Card, 3.9-3](#)
 - [Quick Disconnect 2 \(QD2\), 3.9-3](#)
 - [LS Preamp 4, 3.9-4](#)
 - [Coated Flow Cell, 3.9-4](#)
 - [LS Sensor - 3 Element, 3.9-5](#)
 - [Lens Block, 3.9-5](#)
 - [Light and Lens Shields, 3.9-5](#)
 - [Laser Cover, 3.9-5](#)
 - [LS Control Cable Adapter, 3.9-5](#)
 - [LS Control Cable, 3.9-6](#)
 - [Hard Disk Drive - Intel 300SX Systems, 3.9-7](#)
 - [Hard Disk Drive - Intel 301Z Systems, 3.9-7](#)
 - [IDE Controller - Intel 301Z Only, 3.9-8](#)
 - [When Upgrading the Computer, 3.9-8](#)
 - [Hard Disk Drive Setup, 3.9-9](#)

	<ul style="list-style-type: none"> Alignment and Verification, 3.9-9 Power-Up Checks, 3.9-9 TTM Alignment, 3.9-9 System Verification, 3.9-9 Disposition of Removed Parts, 3.9-10 Return to Coulter Remanufacturing and Repair Center (CRRC), 3.9-10 Leave with Customer, 3.9-10 Discard, 3.9-10
3.10	<ul style="list-style-type: none"> SOFTWARE 1G.1 TO REVISION 3X UPGRADE, 3.10-1 System Qualifications for Upgrade, 3.10-1 Software, 3.10-1 Hardware, 3.10-1 Host Interface, 3.10-1 Time Required to Perform Upgrade, 3.10-1 Tools/Supplies Needed, 3.10-1 STKS Baseline, 3.10-1 Hardware Upgrade, 3.10-2 ANALOG Card, 3.10-2 DIFF PROC Card, 3.10-2 MPU/87 Card, 3.10-2 I/O CAL Card, 3.10-3 Diluter Control 3 Card, 3.10-3 Laser REF Card, 3.10-3 Quick Disconnect 2 (QD2), 3.10-3 LS Preamp 4, 3.10-4 Coated Flow Cell, 3.10-4 LS Sensor - 3 Element, 3.10-5 Lens Block, 3.10-5 Light and Lens Shields, 3.10-5 Laser Cover, 3.10-5 LS Control Cable Adapter, 3.10-5 LS Control Cable, 3.10-6 When Upgrading the Computer, 3.10-7 Hard Disk Drive Setup, 3.10-7 Alignment and Verification, 3.10-7 Power-Up Checks, 3.10-8 TTM Alignment, 3.10-8 System Verification, 3.10-8 Disposition of Removed Parts, 3.10-8 Return to Coulter Remanufacturing and Repair Center (CRRC), 3.10-8 Leave with Customer, 3.10-8 Discard, 3.10-8
3.11	ENABLING THE RETIC OPTION (SOFTWARE VERSION 2X AND HIGHER), 3.11-1
3.12	ENABLING THE CD4 AND CD8 OPTIONS (SOFTWARE VERSION 3X AND HIGHER), 3.12-1
3.13	CD4 AND CD8 SAMPLE PREPARATION MIXER, 3.13-1
3.14	SOFTWARE 2A TO REVISION 3X UPGRADE, 3.14-1
4	SERVICE/REPAIR PROCEDURES, 4.1-1
4.1	<ul style="list-style-type: none"> ANALYZER SERVICE ROUTINES, 4.1-1 Purpose, 4.1-1 Procedure, 4.1-1
4.2	<ul style="list-style-type: none"> ANALYZER DIAGNOSTIC ROUTINES, 4.2-1 CRT DISPLAY TEST, 4.2-1

- [RAM TEST, 4.2-1](#)
- [ROM TEST, 4.2-1](#)
- [SENSOR TEST, 4.2-2](#)
- [CRT BUTTONS TEST, 4.2-4](#)
- [CRT ALIGNMENT TEST, 4.2-4](#)

- [4.3 ACCESSING THE SCOPE MENU AND CHANGING THE DISPLAY SPEED, 4.3-1](#)
 - [Purpose, 4.3-1](#)
 - [Procedure, 4.3-1](#)
 - [Verification, 4.3-2](#)

- [4.4 CRT INTENSITY ADJUSTMENT, 4.4-1](#)
 - [Tools/Supplies Needed, 4.4-1](#)
 - [Procedure, 4.4-1](#)

- [4.5 DIFF ANALOG PULSES TEST, 4.5-1](#)
 - [Tools/Supplies Needed, 4.5-1](#)
 - [Procedure, 4.5-1](#)

- [4.6 HGB LAMP ADJUSTMENT, 4.6-1](#)

- [4.7 OPTICS ADJUSTMENT, 4.7-1](#)
 - [Optics Hardware Adjustment, 4.7-1](#)
 - [Purpose, 4.7-1](#)
 - [Procedure, 4.7-1](#)
 - [Optics Lamp Intensity Adjustment, 4.7-1](#)
 - [Purpose, 4.7-1](#)
 - [Procedure, 4.7-2](#)

- [4.8 CBC LYTIC REAGENT PUMPS VOLUME TEST, 4.8-1](#)
 - [Tools/Supplies Needed, 4.8-1](#)
 - [Procedure, 4.8-1](#)

- [4.9 DILUENT DISPENSER REMOVAL, REPLACEMENT AND ADJUSTMENT, 4.9-1](#)
 - [Purpose, 4.9-1](#)
 - [Tools/Supplies Needed, 4.9-1](#)
 - [Removal, 4.9-1](#)
 - [Replacement, 4.9-2](#)
 - [Adjustment, 4.9-2](#)
 - [Verification, 4.9-4](#)

- [4.10 ERYTHROLYSE II PUMP AND STABILYSE PUMP VOLUME ADJUSTMENT, 4.10-1](#)
 - [Purpose, 4.10-1](#)
 - [Tools/Supplies Needed, 4.10-2](#)
 - [A. Erythrolyse II Pump Preliminary Volume Adjustment, 4.10-2](#)
 - [B. StabiLyse Pump Volume Adjustment, 4.10-5](#)
 - [C. Erythrolyse II Pump Volume Adjustment, 4.10-7](#)
 - [D. Final Whole Blood Verification, 4.10-8](#)

- [4.11 ASPIRATION PUMPS VOLUME CHECK, 4.11-1](#)
 - [Tools/Supplies Needed, 4.11-1](#)
 - [Checking the Primary-Mode Aspiration Pump, 4.11-1](#)
 - [Checking the Secondary-Mode Aspiration Pump, 4.11-2](#)

- [4.12 SOLENOID TEST, 4.12-1](#)
 - [Activating Individual Solenoids, 4.12-1](#)
 - [Activating Flagged Solenoids, 4.12-3](#)
 - [SL15, 4.12-3](#)
 - [SL23 and SL37, 4.12-4](#)

- . [SL25, 4.12-4](#)
- . [SL26, 4.12-5](#)
- . [SL27, 4.12-5](#)
- . [SL30, 4.12-5](#)

- 4.13 [BSV HOUSING REMOVAL AND REPLACEMENT, 4.13-1](#)
 - [Tools/Supplies Needed, 4.13-1](#)
 - [Removal, 4.13-1](#)
 - [Replacement, 4.13-2](#)
 - [Verification, 4.13-2](#)

- 4.14 [DILUTER CONTROL 3 CARD REMOVAL AND REPLACEMENT, 4.14-1](#)
 - [Tools/Supplies Needed, 4.14-1](#)
 - [Removal, 4.14-1](#)
 - [Replacement, 4.14-2](#)
 - [Verification, 4.14-3](#)

- 4.15 [AUDIBLE ALARMS TESTS, 4.15-1](#)
 - [Purpose, 4.15-1](#)
 - [Testing the Analyzer Alarms, 4.15-1](#)
 - [Testing the Diluter Alarms, 4.15-1](#)
 - [Verifying Instrument Performance, 4.15-2](#)

- 4.16 [BACKGROUND CHECKS, 4.16-1](#)
 - [Dispensing Clean Diluent, 4.16-1](#)
 - [Purpose, 4.16-1](#)
 - [Tools/Supplies Needed, 4.16-1](#)
 - [Procedure, 4.16-1](#)
 - [Primary-Mode Check, 4.16-1](#)
 - [Tools/Supplies Needed, 4.16-1](#)
 - [Procedure, 4.16-1](#)
 - [Secondary-Mode Check, 4.16-3](#)
 - [Tools/Supplies Needed, 4.16-3](#)
 - [Procedure, 4.16-3](#)

- 4.17 [ELECTRONIC TESTS, 4.17-1](#)
 - [RAMP TEST, 4.17-1](#)
 - [PRECISION TEST, 4.17-1](#)

- 4.18 [APERTURE CLEANING TEST, 4.18-1](#)

- 4.19 [APERTURE AND INTERNAL ELECTRODE BLEACHING, 4.19-1](#)
 - [Tools/Supplies Needed, 4.19-1](#)
 - [Procedure, 4.19-1](#)

- 4.20 [APERTURE CALIBRATION, 4.20-1](#)
 - [Purpose, 4.20-1](#)
 - [Tools/Supplies Needed, 4.20-2](#)
 - [Preliminary Setup, 4.20-2](#)
 - [Latex Calibration - CBC, 4.20-3](#)
 - [Aperture Balancing, 4.20-8](#)
 - [Flow-Rate Matching, 4.20-12](#)

- 4.21 [INITIAL ADJUSTMENT TO 5C NORMAL CELL CONTROL, 4.21-1](#)
 - [Purpose, 4.21-1](#)
 - [Tools/Supplies Needed, 4.21-1](#)
 - [Preliminary Setup, 4.21-1](#)
 - [Adjustment, 4.21-2](#)

- [4.22](#) [MATCHING PRIMARY AND SECONDARY MODES, 4.22-1](#)
[Analyzing the Samples and Collecting the Data, 4.22-1](#)
[Calculating and Entering the Calibration Factors, 4.22-2](#)
[Verifying the Secondary-Mode Calibration, 4.22-3](#)
- [4.23](#) [UNDER LEFT STACK SWITCH REMOVAL, REPLACEMENT AND VERIFICATION, 4.23-1](#)
[Tools/Supplies Needed, 4.23-1](#)
[Removal, 4.23-1](#)
[Replacement, 4.23-1](#)
[Verification, 4.23-1](#)
- [4.24](#) [UNDER RIGHT STACK/STRIPPER PLATE SWITCH REMOVAL, REPLACEMENT AND VERIFICATION, 4.24-1](#)
[Tools/Supplies Needed, 4.24-1](#)
[Removal, 4.24-1](#)
[Replacement, 4.24-2](#)
[Verification, 4.24-2](#)
- [4.25](#) [LEFT LIFT SWITCH REMOVAL, REPLACEMENT AND VERIFICATION, 4.25-1](#)
[Tools/Supplies Needed, 4.25-1](#)
[Removal, 4.25-1](#)
[Replacement, 4.25-1](#)
[Verification, 4.25-1](#)
- [4.26](#) [RIGHT LIFT SWITCH REMOVAL, REPLACEMENT AND VERIFICATION, 4.26-1](#)
[Tools/Supplies Needed, 4.26-1](#)
[Removal, 4.26-1](#)
[Replacement, 4.26-1](#)
[Verification, 4.26-1](#)
- [4.27](#) [PROXIMITY SWITCHES REMOVAL, REPLACEMENT AND ADJUSTMENT, 4.27-1](#)
[Tools/Supplies Needed, 4.27-1](#)
[Removal, 4.27-1](#)
[Replacement, 4.27-1](#)
[Adjustment, 4.27-1](#)
[Adjustment of S5 After a SERVICE 105 Error Is Generated, 4.27-2](#)
[Method 1, 4.27-3](#)
[Method 2, 4.27-3](#)
[Verification, 4.27-3](#)
- [4.28](#) [RIGHT OR LEFT LIFT ELEVATOR REMOVAL, REPLACEMENT AND VERIFICATION, 4.28-1](#)
[Tools/Supplies Needed, 4.28-1](#)
[Removal, 4.28-1](#)
[Replacement, 4.28-2](#)
[Verification, 4.28-2](#)
- [4.29](#) [ROCKER BED BELT TENSION ADJUSTMENT, 4.29-1](#)
[Tools/Supplies Needed, 4.29-1](#)
[Procedure, 4.29-1](#)
- [4.30](#) [ROCKER BED AIR CYLINDER REMOVAL, REPLACEMENT AND VERIFICATION, 4.30-1](#)
[Tools/Supplies Needed, 4.30-1](#)
[Removal, 4.30-1](#)
[Replacement, 4.30-1](#)
[Verification, 4.30-1](#)

- 4.31 [ROCKER BED REMOVAL AND REPLACEMENT, 4.31-1](#)
 - [Tools/Supplies Needed, 4.31-1](#)
 - [Removal, 4.31-1](#)
 - [Replacement, 4.31-2](#)
 - [Verification, 4.31-2](#)

- 4.32 [CASSETTE TRANSPORT AND PIERCING STATION ASSEMBLY \(CTPSA\) REMOVAL AND REPLACEMENT, 4.32-1](#)
 - [Tools/Supplies Needed, 4.32-1](#)
 - [Removal, 4.32-1](#)
 - [Replacement, 4.32-2](#)

- 4.33 [CASSETTE TRANSPORT AND PIERCING STATION ASSEMBLY VERIFICATION, 4.33-1](#)
 - [Tools/Supplies Needed, 4.33-1](#)
 - [Procedure, 4.33-1](#)

- 4.34 [ROCKER BED/RAM ALIGNMENT, 4.34-1](#)
 - [Purpose, 4.34-1](#)
 - [Tools/Supplies Needed, 4.34-1](#)
 - [Piercing Station Channel Alignment, 4.34-1](#)
 - [Cassette Transport Subassembly \(Rocker Bed\) Alignment, 4.34-2](#)
 - [Needle Adjustment, 4.34-4](#)
 - [Rocker Bed 45 Degrees Forward Alignment and Bed Lock Adjustment, 4.34-7](#)
 - [Stripper Plate Adjustment Verification, 4.34-10](#)
 - [Tube Ram Alignment, 4.34-11](#)
 - [Side-to-Side Tube Ram Alignment, 4.34-13](#)
 - [Up/Down Tube Ram Alignment, 4.34-15](#)

- 4.35 [TUBE DETECTOR REPLACEMENT, ADJUSTMENT AND VERIFICATION, 4.35-1](#)
 - [Tools/Supplies Needed, 4.35-1](#)
 - [Replacement, 4.35-1](#)
 - [Adjustment, 4.35-3](#)
 - [Coarse Adjustment, 4.35-3](#)
 - [Fine Adjustment, 4.35-3](#)
 - [Verification, 4.35-4](#)

- 4.36 [BUMPER AND BED POSITION SENSOR VERIFICATION AND ADJUSTMENT, 4.36-1](#)
 - [Tools/Supplies Needed, 4.36-1](#)
 - [Verification and Adjustment of the Bumpers, 4.36-1](#)
 - [Rear Bumper Adjustment, 4.36-1](#)
 - [Front Bumper Adjustment, 4.36-2](#)
 - [Verification of the Bed Sensor Flag, 4.36-2](#)
 - [Verification and Adjustment of the Bed Sensors, 4.36-3](#)
 - [Bed Backward Sensor, 4.36-3](#)
 - [Bed Horizontal Sensor, 4.36-4](#)
 - [Bed Forward Sensor, 4.36-5](#)
 - [Verification of the System, 4.36-6](#)

- 4.37 [BAR-CODE SCANNER CHECKS AND ADJUSTMENTS, 4.37-1](#)
 - [Tools/Supplies Needed, 4.37-1](#)
 - [Set Up, 4.37-1](#)
 - [Checks and Adjustments, 4.37-2](#)
 - [Home Position, 4.37-2](#)
 - [Center Adjustment, 4.37-3](#)
 - [Height Over Tube Label Adjustment, 4.37-5](#)
 - [Height Over Cassette Label Adjustment, 4.37-6](#)
 - [Speed Check, 4.37-8](#)

- [Electrical Checks, 4.37-9](#)
 - [Bar-Code Position Sensor Adjustment, 4.37-9](#)
 - [Verification, 4.37-10](#)
- [4.38 BAR-CODE SCANNER ALIGNMENT WITH OSCILLOSCOPE, 4.38-1](#)
 - [Purpose, 4.38-1](#)
 - [Tools/Supplies Needed, 4.38-1](#)
 - [Alignment, 4.38-1](#)
 - [Verification, 4.38-5](#)
- [4.39 BAR-CODE READ TEST, 4.39-1](#)
 - [Tools/Supplies Needed, 4.39-1](#)
 - [Procedure, 4.39-1](#)
- [4.40 BAR-CODE DECODER CARD \(BCD\) REMOVAL AND REPLACEMENT, 4.40-1](#)
 - [Tools/Supplies Needed, 4.40-1](#)
 - [Removal, 4.40-1](#)
 - [Replacement, 4.40-1](#)
 - [Verification, 4.40-1](#)
- [4.41 BUBBLE/BLOOD DETECTOR CARD REMOVAL, REPLACEMENT AND ADJUSTMENT, 4.41-1](#)
 - [Tools/Supplies Needed, 4.41-1](#)
 - [Removal, 4.41-1](#)
 - [Replacement, 4.41-1](#)
 - [Adjustment, 4.41-1](#)
 - [Verification, 4.41-7](#)
- [4.42 BLOOD DETECTOR PERFORMANCE TEST, 4.42-1](#)
 - [Tools/Supplies Needed, 4.42-1](#)
 - [Procedure, 4.42-1](#)
- [4.43 DRIP PAN REMOVAL AND REPLACEMENT, 4.43-1](#)
 - [Purpose, 4.43-1](#)
 - [Tools/Supplies Needed, 4.43-1](#)
 - [Removal, 4.43-1](#)
 - [Replacement, 4.43-2](#)
 - [Verification, 4.43-2](#)
- [4.44 RINSE TROUGH REMOVAL AND REPLACEMENT, 4.44-1](#)
 - [Tools/Supplies Needed, 4.44-1](#)
 - [Removal, 4.44-1](#)
 - [Replacement, 4.44-2](#)
 - [Verification, 4.44-2](#)
- [4.45 LYTIC REAGENT AND DILUENT DISPENSE TIMING CHECK, 4.45-1](#)
 - [Tools/Supplies Needed, 4.45-1](#)
 - [Procedure, 4.45-1](#)
- [4.46 SENSOR CARD REMOVAL AND REPLACEMENT, 4.46-1](#)
- [4.47 FLOW CELL CLEANING, 4.47-1](#)
 - [Purpose, 4.47-1](#)
 - [Tools/Supplies Needed, 4.47-1](#)
 - [Procedure, 4.47-1](#)
- [4.48 LENS BLOCK DISASSEMBLY/CLEANING, 4.48-1](#)
 - [Purpose, 4.48-1](#)

- [Tools/Supplies Needed, 4.48-1](#)
 - [Procedure, 4.48-1](#)
- 4.49 [FLOW CELL PLUG REMOVAL, 4.49-1](#)
 - [Purpose, 4.49-1](#)
 - [Procedure, 4.49-1](#)
- 4.50 [VCS OPTIMIZATION, 4.50-1](#)
 - [Purpose, 4.50-1](#)
 - [Tools/Supplies Needed, 4.50-1](#)
 - A. [Preliminary Checks, 4.50-3](#)
 - B. [Count Ratio Check, 4.50-4](#)
 - C. [VCS Flow Rate Adjustment, 4.50-4](#)
 - D. [Clog Detector Circuit Adjustment, 4.50-5](#)
 - E. [RF Detector Preamp Card C1 Adjustment, 4.50-5](#)
 - E. [DC and RF Preliminary Gain Adjustment, 4.50-5](#)
 - G. [DC Verification, 4.50-6](#)
 - H. [RF Verification, 4.50-8](#)
 - I. [Laser/Flow-Cell Alignment, 4.50-14](#)
 - [Flow Cell Cleaning, 4.50-15](#)
 - [Lens Block Cleaning, 4.50-15](#)
 - [Flow-Cell Z-Axis \(Focus\) Alignment, 4.50-15](#)
 - [Flow-Cell X- and Y-Axis Plate Alignment, 4.50-18](#)
 - [Flow-Cell Y-Axis Final Alignment, 4.50-20](#)
 - J. [Final DC, RF and LS Gain Adjustment, 4.50-21](#)
 - K. [LS Verification, 4.50-21](#)
 - L. [RMS Noise Check, 4.50-23](#)
 - M. [Erythrolyse II and StabiLyse Pump Volume Adjustments, 4.50-23](#)
 - N. [Verification, 4.50-24](#)
- 4.51 [VCS FLOW-RATE ADJUSTMENT, 4.51-1](#)
 - [Purpose, 4.51-1](#)
 - [Tools/Supplies Needed, 4.51-1](#)
 - [Sheath Pressure Adjustment, 4.51-1](#)
 - [Sample Pressure Adjustment, 4.51-1](#)
 - [Verification, 4.51-3](#)
- 4.52 [CLOG DETECTOR CIRCUIT ADJUSTMENT, 4.52-1](#)
 - [Purpose, 4.52-1](#)
 - [Tools/Supplies Needed, 4.52-1](#)
 - [Procedure, 4.52-1](#)
- 4.53 [LATEX VERIFICATION, 4.53-1](#)
 - [Purpose, 4.53-1](#)
 - [Tools/Supplies Needed, 4.53-1](#)
 - [Obtaining Latex Data, 4.53-1](#)
 - [Instrument Verification, 4.53-2](#)
- 4.54 [REPRODUCIBILITY CHECKS, 4.54-1](#)
 - A. [Verify Reproducibility in the Primary Mode, 4.54-1](#)
 - [Tools/Supplies Needed, 4.54-1](#)
 - [Procedure, 4.54-1](#)
 - B. [Verify Reproducibility in the Secondary Mode, 4.54-1](#)
 - [Tools/Supplies Needed, 4.54-1](#)
 - [Procedure, 4.54-1](#)
 - C. [Verify Retic Reproducibility, 4.54-2](#)
 - [Tool/Supplies Needed, 4.54-2](#)
 - [Procedure, 4.54-2](#)

- [4.55](#) [CARRYOVER CHECKS, 4.55-1](#)
 - [A. Check Carryover - CBC, Primary Mode, 4.55-1](#)
 - [Tools/Supplies Needed, 4.55-1](#)
 - [Procedure, 4.55-1](#)
 - [B. Check Carryover - CBC, Secondary Mode, 4.55-1](#)
 - [Tools/Supplies Needed, 4.55-1](#)
 - [Procedure, 4.55-1](#)
 - [C. Check Carryover - Retic. Mode to Mode and Within Mode, 4.55-2](#)
 - [Tools/Supplies Needed, 4.55-2](#)
 - [Procedure - General Instructions, 4.55-2](#)
 - [Mode to Mode, 4.55-2](#)
 - [Within Mode, 4.55-3](#)

- [4.56](#) [USING THE SERVICE DISK 2, 4.56-1](#)
 - [Purpose, 4.56-1](#)
 - [Tools/Supplies Needed, 4.56-1](#)
 - [A. Activating and Deactivating the DMS Service Options, 4.56-1](#)
 - [Activating the DMS Service Options, 4.56-1](#)
 - [Deactivating the DMS Service Options, 4.56-4](#)
 - [B. Using the Service Disk 2 Software on a DMS, 4.56-9](#)
 - [C. Using the Service Disk 2 Software on a Hard Drive, 4.56-11](#)
 - [Installing the Software, 4.56-11](#)
 - [Running the Software, 4.56-11](#)

- [4.57](#) [INTEL 301Z HARDWARE REPLACEMENT AND/OR ADJUSTMENT, 4.57-1](#)
 - [Purpose, 4.57-1](#)
 - [A. DMS Cover Removal and Replacement, 4.57-1](#)
 - [Removal, 4.57-1](#)
 - [Installation, 4.57-2](#)
 - [B. System Card Replacement, 4.57-3](#)
 - [C. Power Supply Replacement, 4.57-4](#)
 - [D. Video Graphics Adapter \(VGA\) Card Replacement, 4.57-4](#)
 - [E. Ram Card \(2 MB\) Replacement, 4.57-5](#)
 - [E. Disk Drive Controller Card Replacement, 4.57-5](#)
 - [G. Floppy Disk Drive Replacement, 4.57-6](#)
 - [H. Hard Disk Drive Replacement, 4.57-6](#)

- [4.58](#) [DIGIBOARD 4 CHANNEL I/O CARD REPLACEMENT, 4.58-1](#)

- [4.59](#) [ZOOM MODEM REPLACEMENT, 4.59-1](#)

- [4.60](#) [DMS CONFIGURATION AND INITIALIZATION, 4.60-1](#)
 - [A. Determining the Appropriate Procedures for the DMS Configuration, 4.60-1](#)
 - [B. Intel Classic R and Classic R PLUS Hardware Configuration and CMOS Setup, 4.60-4](#)
 - [Hardware Configuration, 4.60-4](#)
 - [CMOS Setup, 4.60-6](#)
 - [Verification, 4.60-8](#)
 - [C. NEC Powermate 486 Hardware Configuration and CMOS Setup, 4.60-8](#)
 - [Hardware Configuration, 4.60-8](#)
 - [CMOS Setup, 4.60-9](#)
 - [Verification, 4.60-12](#)
 - [D. Intel 300SX16 Hardware Configuration and CMOS Setup, 4.60-12](#)
 - [Hardware Configuration, 4.60-12](#)
 - [CMOS Setup, 4.60-14](#)
 - [Verification, 4.60-16](#)
 - [E. Intel 300SX20 Hardware Configuration and CMOS Setup, 4.60-16](#)
 - [Hardware Configuration, 4.60-16](#)

- . [CMOS Setup, 4.60-17](#)
- . [Verification, 4.60-20](#)
- F. [Intel 301Z Hardware Configuration and CMOS Setup, 4.60-20](#)
- . [Hardware Configuration, 4.60-20](#)
- . [CMOS Setup, 4.60-20](#)
- . [Verification, 4.60-21](#)
- G. [Partitioning Disk Hard Drives - DOS 3.30 \(40 MB, Drive Type 44\), 4.60-21](#)
- . [Hard Disk Drive Low Level Format - General, 4.60-21](#)
- . [Hard Disk Drive Low Level Format - CheckIt Utility Method, 4.60-22](#)
- . [Hard Disk Drive Low Level Format - Disk Manager Method, 4.60-22](#)
- . [Hard Disk Drive Partitioning, 4.60-23](#)
- H. [Partitioning Disk Hard Drives - DOS 3.30 \(42 MB, 52 MB, 234 MB and 325 MB\), 4.60-27](#)
- . [Partitioning Hard Disk Drives - DOS 5.02, 4.60-30](#)
- J. [Formatting Drive C and D - DOS 3.30, 4.60-32](#)
- K. [Formatting Drive C - DOS 5.02, 4.60-33](#)
- L. [Loading DOS Operating System - DOS 3.30, 4.60-34](#)
- M. [Loading DOS Operating System - DOS 5.02, 4.60-34](#)
- N. [Software Installation - DMS 1A - 1G.1, 4.60-35](#)
- O. [Software Installation - DMS 2B and Higher, 4.60-35](#)
- P. [Deleting DOS 3.30 Partitions, 4.60-36](#)
- Q. [Deleting DOS 5.02 Partitions, 4.60-39](#)

- 4.61 [LOADING AND USING OPTUNE™ HARD DISK OPTIMIZER, 4.61-1](#)
- . [Purpose, 4.61-1](#)
- . [Tools/Supplies Needed, 4.61-1](#)
- A. [Loading the OPTune Software, 4.61-1](#)
- B. [Check-Disk, 4.61-1](#)
- C. [Verify/Fix-Disk, 4.61-2](#)
- D. [Optimize, 4.61-3](#)
- E. [Tune-Disk, 4.61-3](#)
- . [Testing the Current Interleave, 4.61-3](#)
- . [Re-interleaving a Hard Drive, 4.61-3](#)
- F. [System Verification, 4.61-3](#)

- 4.62 [MONITOR REPLACEMENT AND ADJUSTMENT, 4.62-1](#)
- A. [Princeton ULTRASYNCR Monitor, 4.62-1](#)
- . [Replacement, 4.62-1](#)
- . [Brightness and Contrast Adjustment, 4.62-1](#)
- . [Verification, 4.62-1](#)
- B. [Wyse Monitor, 4.62-1](#)
- . [Replacement, 4.62-1](#)
- . [Brightness and Contrast Adjustments, 4.62-2](#)
- . [Verification, 4.62-2](#)
- C. [TATUNG Monitors, 4.62-2](#)
- . [Replacement, 4.62-2](#)
- . [Brightness and Contrast Adjustments, 4.62-3](#)
- . [Other Adjustments, 4.62-3](#)
- . [Verification, 4.62-3](#)

- 4.63 [SERVICE AND MAINTENANCE OF THE POWER SUPPLY - PNEUMATIC SECTION, 4.63-1](#)
- . [Vacuum Trap Bottle Cleaning, 4.63-1](#)
- B. [Compressor Air/Water Filter/Separator Removal and Replacement, 4.63-1](#)
- C. [Compressor/Vacuum Pump Checks, 4.63-2](#)

- 4.64 [APERTURE GROUND LOOP TEST, 4.64-1](#)
- . [Purpose, 4.64-1](#)

[Tools/Supplies Needed, 4.64-1](#)
[Procedure, 4.64-1](#)

ILLUSTRATIONS

- [1.2-1](#) [Warning and Certification Labels on the Laser Head with Protective Housing, 1.2-4](#)
- [1.2-2](#) [Warning and Certification Labels on the Beam Cover, 1.2-5](#)

- [2.2-1](#) [STKS POWER SUPPLY, 2.2-2](#)

- [2.3-1](#) [MAIN POWER PACK Component Locations \(Right Side, Cover Removed\), 2.3-2](#)
- [2.3-2](#) [CONTROL MODULE Fuse and Test Point Locations, 2.3-3](#)
- [2.3-3](#) [CONTROL MODULE Component Locations, 2.3-4](#)

- [2.4-1](#) [2.5 V Reference, Simplified Diagram, 2.4-2](#)
- [2.4-2](#) [Timing of Power Up Signals, 2.4-4](#)
- [2.4-3](#) [Power Up Flow Diagram, 2.4-7](#)

- [2.5-1](#) [Power Supply Voltage Flow, Simplified Diagram, 2.5-2](#)
- [2.5-2](#) [Rear of Analyzer, Door Open, 2.5-6](#)

- [2.6-1](#) [Pneumatic Power Supply Pump, 2.6-1](#)

- [2.8-1](#) [Diluter Front Panel Components, 2.8-5](#)
- [2.8-2](#) [Components Behind Lower Front Door of Diluter, 2.8-6](#)
- [2.8-3](#) [Diluter Rear Panel Components, 2.8-7](#)
- [2.8-4](#) [Diluter Left Rear Door Components \(Left/Right Orientation from Front of Instrument\), 2.8-8](#)
- [2.8-5](#) [BSV \(VL102\) Ports, 2.8-9](#)
- [2.8-6](#) [STKS BSV, Primary Mode, 2.8-10](#)
- [2.8-7](#) [STKS BSV, Secondary Mode, 2.8-11](#)
- [2.8-8](#) [Diff Segmenting Module, Primary Mode, 2.8-12](#)
- [2.8-9](#) [Diff Segmenting Module, Secondary Mode, 2.8-13](#)
- [2.8-10](#) [Flow Cell Detail, 2.8-14](#)
- [2.8-11](#) [VL27 \(Diluent/Cleaning Agent Switching Valve\) Ports, 2.8-14](#)
- [2.8-12](#) [VL66 Ports, 2.8-15](#)
- [2.8-13](#) [Solenoid Locations, 2.8-18](#)
- [2.8-14](#) [Pinch Valve Locations, 2.8-23](#)
- [2.8-15](#) [Manifold and Quick-Disconnect Locations, 2.8-24](#)

- [2.10-1](#) [Diluter Center Rear Door Components, 2.10-1](#)
- [2.10-2](#) [Diluter Control 3 Card Block Diagram, 2.10-3](#)
- [2.10-3](#) [Power Drivers and Solenoids, 2.10-4](#)
- [2.10-4](#) [Reading Sensor Status, 2.10-4](#)
- [2.10-5](#) [Hgb Lamp Control, 2.10-5](#)
- [2.10-6](#) [Power Up/Down Sensing Circuit, 2.10-6](#)

- [2.11-1](#) [Diluter Center Rear Door Components, 2.11-1](#)

- [2.12-1](#) [Locations of Switches and Sensors on Diluter, 2.12-1](#)

- [2.13-1](#) [Bar-Code Scanner, 2.13-1](#)
- [2.13-2](#) [Bar-Code Scanner Block Diagram, 2.13-2](#)
- [2.13-3](#) [Diluter Left Side Door Components, 2.13-3](#)
- [2.13-4](#) [Bar-Code Decoder Card, 2.13-4](#)

- [2.15-1 Universal Tube Detector, 2.15-1](#)
- [2.16-1 Light Scatter Detection, 2.16-1](#)
- [2.17-1 RF Detector Preamp Card Signal Flow, 2.17-1](#)
- [2.18-1 Diluter Right Rear Door Components \(Left/Right Orientation from Front of Instrument\), 2.18-1](#)
- [2.18-2 RF Transformer Signal Flow, 2.18-2](#)
- [2.18-3 RF Power Supply 2 Card Signal Flow, 2.18-2](#)
- [2.19-1 Light Scatter Preamp Module Signal Flow, 2.19-1](#)
- [2.19-2 LS Preamp 4 Module Block Diagram, 2.19-2](#)
- [2.20-1 Diluter Right Rear Door Components \(Left/Right Orientation from Front of Instrument\), 2.20-1](#)
- [2.20-2 Laser Power Supply 2, 2.20-2](#)
- [2.21-1 Tubing Connections to the Sensor Card, 2.21-1](#)
- [2.21-2 Sensor Card Signal Flow, 2.21-1](#)
- [2.22-1 Analyzer Circuit Card Locations, 2.22-1](#)
- [2.22-2 Simplified Analyzer Signal Flow, 2.22-2](#)
- [2.23-1 RBC Count and Histogram Flow, 2.23-1](#)
- [2.23-2 WBC Count and Histogram Flow, 2.23-2](#)
- [2.23-3 Plt Count/Histogram Flow, 2.23-3](#)
- [2.23-4 Hgb Data Flow, 2.23-4](#)
- [2.23-5 Accumulation Time for Particle-Free Diluent, 2.23-5](#)
- [2.24-1 I/O CAL Card Block Diagram, 2.24-2](#)
- [2.25-1 MPU/87 Card Block Diagram, 2.25-2](#)
- [2.26-1 RED/WHT CTR 2 Card Block Diagram, 2.26-2](#)
- [2.27-1 APERT CUR/SIG GEN Card Simplified Block Diagram, 2.27-1](#)
- [2.28-1 PS MON 2 Card Block Diagram, 2.28-2](#)
- [2.29-1 RED/WHT PRE-AMP Cards Block Diagram, 2.29-1](#)
- [2.30-1 PLAT PROC Card Block Diagram, 2.30-2](#)
- [2.31-1 PLAT ADC Card Block Diagram, 2.31-2](#)
- [2.32-1 DATA MEM Card Block Diagram, 2.32-2](#)
- [2.33-1 RED/WHT EDITOR Card Block Diagram, 2.33-1](#)
- [2.34-1 RED/WHT ADC Card Block Diagram, 2.34-1](#)
- [2.35-1 DLY/APERT CLNG Card Block Diagram, 2.35-1](#)
- [2.36-1 Diff Analog Pulses Test Display, 2.36-2](#)
- [2.36-2 Electronic Test Displays, 2.36-3](#)
- [2.36-3 Count Test Displays, 2.36-4](#)
- [2.36-4 VCS LATRON Control Display, 2.36-5](#)
- [2.36-5 Volume Display, 2.36-5](#)

- [2.36-6](#) [Conductivity Display, 2.36-6](#)
- [2.36-7](#) [Light Scatter Display, 2.36-6](#)
- [2.36-8](#) [Phase Adjust Displays, 2.36-7](#)
- [2.36-9](#) [Light Scatter Drift Displays, 2.36-8](#)
- [2.36-10](#) [F55 Displays, 2.36-9](#)
- [2.36-11](#) [CBC + Diff Displays, 2.36-10](#)
- [2.36-12](#) [CBC Only Displays, 2.36-11](#)
- [2.36-13](#) [Diff Only Displays, 2.36-12](#)
- [2.36-14](#) [Accessing CRT/DISP 3 Card DIP Switch, 2.36-13](#)

- [2.37-1](#) [ANALOG 2 Card Signal Flow, 2.37-2](#)
- [2.37-2](#) [Interplay between ANALOG 2 and DIFF PROC Cards, 2.37-3](#)
- [2.37-3](#) [ANALOG 4 Card Block Diagram, 2.37-4](#)

- [2.38-1](#) [DIFF PROC Card Block Diagram, 2.38-2](#)

- [2.42-1](#) [Digiboard Jumper Locations, 2.42-2](#)
- [2.42-2](#) [Digiboard Daughter Card Jumper Locations, 2.42-2](#)
- [2.42-3](#) [Communications Adapter Card Block Diagram and Pin Layout, 2.42-3](#)

- [2.43-1](#) [Intel 301Z Computer System, 2.43-2](#)
- [2.43-2](#) [Intel 301Z System Card Jumpers, 2.43-3](#)
- [2.43-3](#) [Power Supply Connectors, 2.43-4](#)
- [2.43-4](#) [Disk Drive Controller Card Block Diagram, 2.43-6](#)

- [2.44-1](#) [Intel 300SX16 Computer Base Internal Layout, 2.44-1](#)
- [2.44-2](#) [Intel 300SX20 Computer Base Internal Layout, 2.44-2](#)
- [2.44-3](#) [Intel 300SX System Components, Rear of Computer Base, 2.44-2](#)

- [2.45-1](#) [Princeton ULTRASYNCR Monitor Control, Rear of Monitor, 2.45-1](#)

- [3.2-1](#) [Installing Cassette Labels, 3.2-2](#)
- [3.2-2](#) [Diluter Pinch Valve Locations, 3.2-5](#)

- [3.3-1](#) [Interunit Power and Signal Cable Connections, 3.3-2](#)
- [3.3-2](#) [POWER SUPPLY Fluidic Lines, 3.3-4](#)
- [3.3-3](#) [Numeric Designations for Diluter Input Fittings, 3.3-5](#)
- [3.3-4](#) [Reagent and Waste Container Pickup Tubes, 3.3-7](#)

- [3.4-1](#) [Diluter, Behind Lower Front Door, 3.4-5](#)

- [3.9-1](#) [Luer Fitting Component Identification, 3.9-4](#)
- [3.9-2](#) [Control Cable Adapter, 3.9-6](#)
- [3.9-3](#) [Hard-Disk Drive Mounting Rail, 3.9-7](#)

- [3.10-1](#) [Luer Fitting Component Identification, 3.10-4](#)
- [3.10-2](#) [Control Cable Adapter, 3.10-6](#)

- [4.1-1](#) [Analyzer Service Routines, 4.1-2](#)

- [4.2-1](#) [Switch and Sensor Locations, 4.2-3](#)

- [4.4-1](#) [Brightness Potentiometer, 4.4-1](#)

- [4.5-1](#) [Diff Analog Pulses Test Printout, 4.5-2](#)

- [4.8-1](#) [Lytic Reagent Input Tubing, 4.8-1](#)

- [4.9-1 Diluent Dispensers and Associated Pinch Valves, 4.9-1](#)
- [4.9-2 Diluent Input Line to Bath, 4.9-3](#)

- [4.10-1 Match Sheath Fluid to Sample Stream Conductivity, 4.10-1](#)
- [4.10-2 Affect of Dilution Conductivity on Count Ratio, 4.10-2](#)
- [4.10-3 Affect of Osmolality on NE DC Mean, 4.10-2](#)
- [4.10-4 Erythrolyse II and StabiLyse Pump Optimization Flow Diagram, 4.10-3](#)
- [4.10-5 Tubing from VL 54 to Mixing Chamber, 4.10-4](#)
- [4.10-6 Volumetric Cylinder Calibration Marks, 4.10-4](#)
- [4.10-7 Reading Fluid Meniscus, 4.10-4](#)
- [4.10-8 Location of Piston Style and Diaphragm Style Pump Adjustments, 4.10-5](#)

- [4.11-1 BSV Aspiration Line, 4.11-1](#)

- [4.13-1 BSV Assembly, 4.13-1](#)

- [4.14-1 Accessing the Diluter Control 3 Card, 4.14-1](#)

- [4.19-1 Baths and Associated Tubing Connections, 4.19-1](#)

- [4.24-1 Tube Detector Assembly Allen Screw, 4.24-1](#)

- [4.28-1 Pivot Pin Mounting Bracket and Retaining Setscrew, 4.28-1](#)

- [4.29-1 Belt Drive Assembly, Front View, Upside Down, 4.29-1](#)

- [4.32-1 Positioning Straight Edge, 4.32-3](#)

- [4.34-1 Verifying Piercing Station Channel to Rocker Bed Alignment, 4.34-2](#)
- [4.34-2 Pivot Pin Mounting Bracket, Showing Left Retaining Setscrew, 4.34-3](#)
- [4.34-3 Needle Hinge Block/Needle Holder Alignment, 4.34-4](#)
- [4.34-4 Needle in Stripper Plate Hole, 4.34-6](#)
- [4.34-5 Needle Block Alignment Fixture, 4.34-8](#)
- [4.34-6 Bed Lock Actuator Alignment, 4.34-9](#)
- [4.34-7 Tube Ram Air Cylinder, 4.34-12](#)
- [4.34-8 Stripper Plate and Needle Ram Tip GO Gauge or Universal Stripper Plate Alignment Gauge in Position, 4.34-12](#)
- [4.34-9 Ram Tower Screws, 4.34-14](#)
- [4.34-10 Ram Height GO/NO GO Gauge in Position, 4.34-15](#)

- [4.35-1 Tube Detector Assembly, 4.35-2](#)

- [4.36-1 Sensor Locations, 4.36-2](#)
- [4.36-2 Plate/Channel Screws, 4.36-3](#)

- [4.37-1 Bar-code Scanner Home Alignment, 4.37-2](#)
- [4.37-2 Tubing to Bar-Code Scanner Cylinder, Clamped, 4.37-4](#)
- [4.37-3 Bar-code Scanner to Stripper Plate Alignment Pin Installed, 4.37-4](#)
- [4.37-4 Bar-Code Scanner Housing and Mounting Block, 4.37-5](#)
- [4.37-5 BCS and Tube Detector Height Adjustment Block Installed, 4.37-6](#)
- [4.37-6 Bar-Code Scanner Adjustment Point Locations, 4.37-7](#)
- [4.37-7 Height Over Cassette Label Adjustment, 4.37-7](#)
- [4.37-8 Bar-Code Scanner Card Pins and Test Points, 4.37-9](#)

- [4.38-1 Bar-Code Decoder Card Jumper and Pin Locations, 4.38-2](#)
- [4.38-2 Comparing Cassette and Tube Label Waveforms, 4.38-5](#)

- [4.41-1 Bubble/Blood Detector Card Test Points and LEDs, 4.41-3](#)
- [4.41-2 Analyzer Backplane, 4.41-4](#)
- [4.41-3 Timing with Diluent, 4.41-5](#)

- [4.43-1 Needle Housing and Rinse Trough Assembly, 4.43-1](#)

- [4.45-1 WBC Bath Tubing Disconnect for Lytic Reagent/Diluent Timing Hookup, 4.45-2](#)
- [4.45-2 Equipment Hookup for Lytic Reagent/Diluent Timing Procedure, 4.45-3](#)

- [4.46-1 Removing Sensor Card, 4.46-1](#)

- [4.47-1 Shaping Cotton Swab, 4.47-2](#)
- [4.47-2 Wetting Swab with Alcohol, 4.47-2](#)
- [4.47-3 Wiping Front of Flow Cell, 4.47-2](#)
- [4.47-4 Wiping Rear of Flow Cell, 4.47-2](#)

- [4.50-1 Optimization Procedure Flow, 4.50-2](#)
- [4.50-2 Histogram of Good Count Ratio Data, 4.50-4](#)
- [4.50-3 Histogram of Poor Count Ratio Data, 4.50-4](#)
- [4.50-4 Acceptable Static DC Noise Display, 4.50-7](#)
- [4.50-5 Unacceptable Static DC Noise Display, 4.50-7](#)
- [4.50-6 Acceptable Dynamic DC Noise, 4.50-7](#)
- [4.50-7 Acceptable Static RF Noise Display, 4.50-8](#)
- [4.50-8 Unacceptable Static RF Noise Display, 4.50-8](#)
- [4.50-9 Acceptable Dynamic RF Noise Display, 4.50-9](#)
- [4.50-10 RF 60 Hz, 4.50-10](#)
- [4.50-11 RF 60 Hz with Noise Spikes, 4.50-10](#)
- [4.50-12 Normal RF Random Baseline Bounce, 4.50-10](#)
- [4.50-13 RF Output with Bubble Trapped in Sheath 2, 4.50-11](#)
- [4.50-14 Normal RF Baseline while Cycling Diluent, 4.50-11](#)
- [4.50-15 Noisy RF Baseline while Cycling Diluent, 4.50-11](#)
- [4.50-16 Normal RF Baseline while Cycling Diluent \(RF Noise 22 mV\), 4.50-12](#)
- [4.50-17 Noisy RF Baseline while Cycling Diluent \(RF Noise <100 mV\), 4.50-12](#)
- [4.50-18 LATRON Control Sample with a Good RF Tube and Box, 4.50-12](#)
- [4.50-19 LATRON Control Sample with Bad RF Tube and Box, 4.50-13](#)
- [4.50-20 RF Output Running LATRON Control \(Leak at QD7\), 4.50-13](#)
- [4.50-21 LATRON Control Run with DC Gain Drop, 4.50-13](#)
- [4.50-22 Laser/Flow-Cell Alignment Work Flow, 4.50-14](#)
- [4.50-23 Flow-Cell Z-Axis Alignment, 4.50-16](#)
- [4.50-24 Scatter Sensor Laser Diffraction, 4.50-17](#)
- [4.50-25 Flow-Cell X- and Y-Axis Plate Adjustment, 4.50-18](#)
- [4.50-26 Laser Reflected Light Beam with Special Light Shield Installed, 4.50-19](#)
- [4.50-27 Laser Diffraction Pattern on Paper, 4.50-20](#)
- [4.50-28 Acceptable Static LS Noise Display, 4.50-22](#)
- [4.50-29 Unacceptable Static LS Noise Display, 4.50-22](#)
- [4.50-30 Acceptable Dynamic LS Noise Display, 4.50-22](#)

- [4.51-1 Unacceptable Flow-Rate Histogram, 4.51-2](#)

- [4.56-1 Enhanced Printout, 1G.1 Software, 4.56-2](#)
- [4.56-2 Enhanced Printout, 2B Software, 4.56-3](#)
- [4.56-3 Aperture Test Screen, 1G.1 Software, 4.56-5](#)
- [4.56-4 Aperture Test Screen, 2B and Higher Software, 4.56-5](#)
- [4.56-5 Autoreporter Test and Adjust Screen, 2B Software and Higher, 4.56-6](#)
- [4.56-6 Cassette and Position Number Screen, 2B Software and Higher, 4.56-6](#)
- [4.56-7 Digiboard Address Screen, 2B Software and Higher, 4.56-6](#)
- [4.56-8 Diff Latex Check - Diff Mode Screen, 2B Software and Higher, 4.56-7](#)
- [4.56-9 Diff Latex Check - Retic Mode, 2B Software and Higher, 4.56-7](#)
- [4.56-10 Diff Latex Check - Subsets Mode, 3A Software and Higher, 4.56-7](#)

<u>4.56-11</u>	<u>Diff Latex Screen Printout, 1G.1 Software and Higher, 4.56-8</u>
<u>4.56-12</u>	<u>Precision 1 and Precision 2 Reference Screen, 2B Software and Higher, 4.56-8</u>
<u>4.56-13</u>	<u>Startup Reference Screen, 2B Software and Higher, 4.56-8</u>
<u>4.56-14</u>	<u>WBC Histogram Check Printout, 1G.1 Software, 4.56-8</u>
<u>4.56-15</u>	<u>Control and Sample File Selections Available for Viewing, 4.56-9</u>
<u>4.56-16</u>	<u>Single-Parameter Graph, 4.56-11</u>
<u>4.56-17</u>	<u>Parameter vs. Parameter Graphs, 4.56-12</u>
<u>4.56-18</u>	<u>Multiple-Parameter Graph, 4.56-12</u>
<u>4.56-19</u>	<u>Flag Graph, 4.56-12</u>
<u>4.56-20</u>	<u>Statistics Window, 4.56-13</u>
<u>4.56-21</u>	<u>Sequential (Points) Mode Graph, 4.56-13</u>
<u>4.56-22</u>	<u>Zoom Mode, 4.56-13</u>
<u>4.56-23</u>	<u>Histogram Mode, 4.56-14</u>
<u>4.56-24</u>	<u>Date Offset Mode, 4.56-14</u>
<u>4.56-25</u>	<u>Control File, 4.56-14</u>
<u>4.56-26</u>	<u>Service Disk 2 Utilites Menu Tree, 4.56-15</u>
<u>4.57-1</u>	<u>Monitor Cables, 4.57-1</u>
<u>4.57-2</u>	<u>Intel 301Z Computer Base, Front View, 4.57-2</u>
<u>4.57-3</u>	<u>Intel 301Z Computer Base, Rear View, 4.57-2</u>
<u>4.57-4</u>	<u>DMS Cover Removal and Installation, 4.57-3</u>
<u>4.57-5</u>	<u>Hard Disk Drive Jumpers and Terminal Resistor Pack, 4.57-7</u>
<u>4.60-1</u>	<u>Intel Classic R Expansion Slots, 4.60-5</u>
<u>4.60-2</u>	<u>Intel Classic R PLUS Expansion Slots, 4.60-6</u>
<u>4.60-3</u>	<u>NEC Powermate 486 Expansion Slots, 4.60-9</u>
<u>4.60-4</u>	<u>Intel 300SX Series Expansion Slots, 4.60-13</u>
<u>4.63-1</u>	<u>Air/Water Filter/Separator, 4.63-2</u>

TABLES

<u>2.5-1</u>	<u>Voltage Regulator 3 Card Voltage Distribution, 2.5-5</u>
<u>2.5-2</u>	<u>5-V Distribution, 2.5-6</u>
<u>2.6-1</u>	<u>Vacuum and Pressure Schematic Components, 2.6-2</u>
<u>2.8-1</u>	<u>Diluter Components, 2.8-1</u>
<u>2.8-2</u>	<u>BSV Ports, 2.8-9</u>
<u>2.8-3</u>	<u>VL27 Ports, 2.8-14</u>
<u>2.8-4</u>	<u>Solenoid Actions, 2.8-16</u>
<u>2.8-5</u>	<u>Pinch Valve Functions, 2.8-19</u>
<u>2.9-1</u>	<u>Diluter F-Key Functions, 2.9-1</u>
<u>2.12-1</u>	<u>Diluter Sensor Functions, 2.12-2</u>
<u>2.14-1</u>	<u>Fail Messages, LEDs and Conditions, 2.14-2</u>
<u>2.28-1</u>	<u>Regulator LEDs, 2.28-1</u>
<u>2.36-1</u>	<u>Analyzer Scope Modes, 2.36-2</u>
<u>2.45-1</u>	<u>Princeton ULTRASYN Monitor Control Functions, 2.45-1</u>
<u>3.1-1</u>	<u>Fan Locations, 3.1-2</u>

<u>3.10-1</u>	<u>EDS Settings (Ver 1.6), 3.10-3</u>
<u>4.1-1</u>	<u>SERVICE MENU Selections/Explanations, 4.1-3</u>
<u>4.2-1</u>	<u>Sensor Test, 4.2-2</u>
<u>4.12-1</u>	<u>Solenoid Actions, 4.12-1</u>
<u>4.38-1</u>	<u>Bar-Code Scanner Waveforms for Example Label, 4.38-3</u>
<u>4.38-2</u>	<u>Bar-Code Scanner Waveforms for Example Label, 4.38-4</u>
<u>4.50-1</u>	<u>Purpose of VCS Optimization Procedures, 4.50-3</u>
<u>4.50-2</u>	<u>RF Troubleshooting, 4.50-9</u>
<u>4.56-1</u>	<u>DMS Service Menu Options, 4.56-4</u>
<u>4.56-2</u>	<u>Service Disk 2 Utilities Selections/Explanations, 4.56-16</u>
<u>4.60-1</u>	<u>DMS Configuration-Computer, Hard Drive, DOS Version, Software Version, 4.60-2</u>
<u>4.60-2</u>	<u>Approved BIOS and Motherboard Revisions for Coulter DMS, 4.60-4</u>
<u>4.60-3</u>	<u>Intel Classic R and Classic R PLUS System Card Jumpers, 4.60-5</u>
<u>4.60-4</u>	<u>DMS Software Installation Options, 4.60-35</u>